

straightcurve®


Specifications

240mm Rigidline™

LENGTH 2160mm | TOP THICKNESS 8mm

FINISHES


- Galvanised Steel
- Weathering Steel

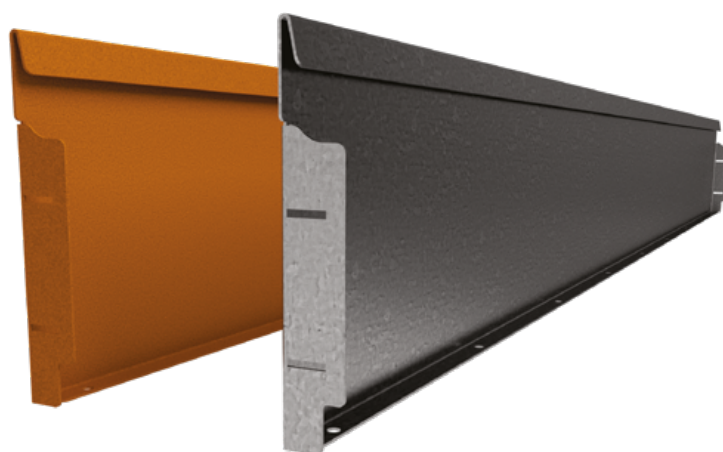

Steel plate thickness 2mm

SOLD AS SET INCLUDING

- 1 x joining set (2 x wedge, 2 x slider, 1 x joint bracket)
- 5 x galvanised spikes, 300mm long

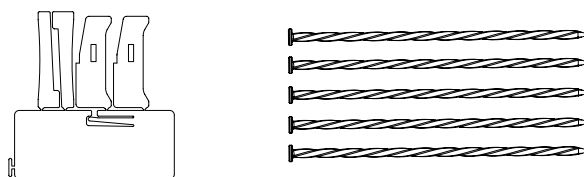


ADDITIONAL ACCESSORIES

REQUIRED

- Small anchor set (2 x Tek screws 12G x 16mm)

OPTIONAL

- Corner piece (arm lengths: 255mm)
- Joining sleeve (6 x Tek screws 12G x 16mm)
- Hard surface fixing bracket (2 x Tek screws 12G x 16mm)

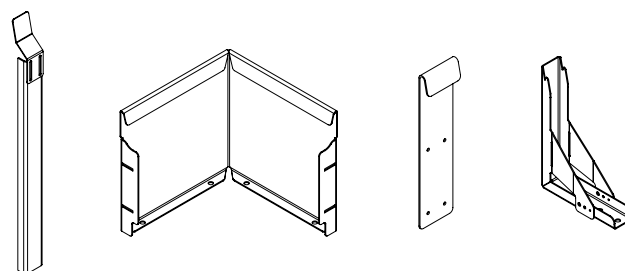

Installation guide 240mm Rigidline™

*Scan me for
Video installation!*



Scan the code or follow the link below for installation video.
[240mm Rigidline™ installation video](#)

PREPARATIONS

Mark line and level or trench as required ready for install.

CORNERS

ANCHOR SETS

Anchor set posts are driven in as a stake behind the edge before attaching to the edge with the fix lip. It is recommended to use two of these per edge.

HARD SURFACE FIXING

If you need to secure the edge to hard surfaces, the hard surface fixing bracket can be used. It's compatible with fixing pins or can be bolted down. (Options sold separately)


JOINING SLEEVES

Shortening a length is sometimes a requirement. The joining sleeve is used to connect the two edges when this occurs. These are fixed to the panel front with screws through the guide holes in the sleeve.


TIP

If installing with a friend connect two panels together first (facedown on a flat surface) then position.


STEP 1 - JOIN

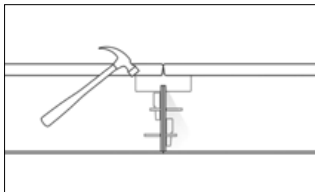


STEP 2 - POSITION

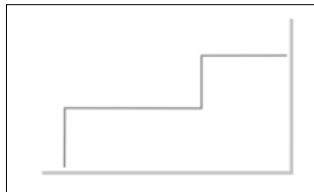


STEP 3 - PEG

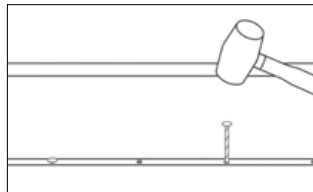


STEP 4A - STAKE

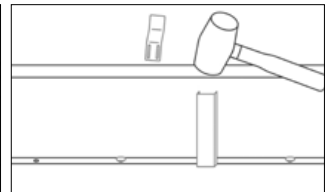

4B - STAKE

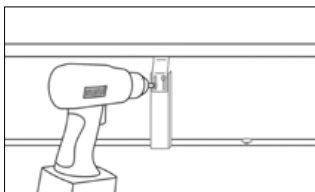

PRE-MADE CORNER*

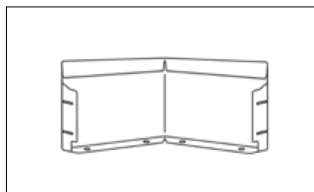

MAKE CORNER - NOTCH/SCORE WITH GRINDER

