straightcurve

Specifications

150mm Rigidline

LENGTH 2200mm | TOP THICKNESS 8mm

FINISHES

- Galvanised Steel
- Weathering Steel

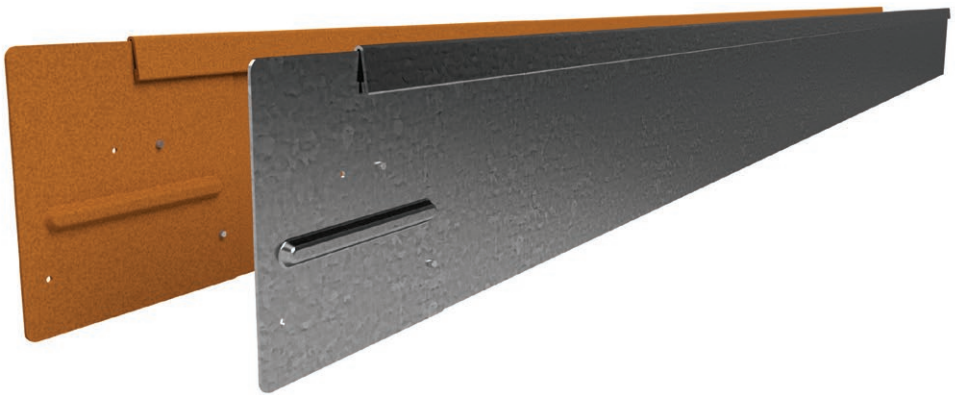

Steel plate thickness 1.6mm

SOLD AS SET INCLUDING

- Connector plate (pre-attached)
- 3 x galvanised pegs



ADDITIONAL ACCESSORIES

- 500mm Corner piece (bend to desired angle)
- Hard surface fixing bracket



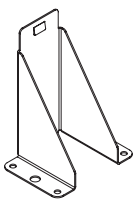

All fixings and accessories not to scale. All accessories are available in weathering and galvanised steel finish.

straightcurve

Installation guide
150mm Rigidline

Scan me for Video installation!

Scan the code or follow the link below for installation video.
150mm Rigidline installation video

PREPARATIONS

Mark line and level out or create a trench. If using as an invasive grass barrier, clear away all runners entering garden bed first.

CORNERS

Standard corners are available for purchase, but you can choose to make your own. Simply score a line down the back of the edge and create a sufficient opening (5-7mm) in the double folded lip at the top. Bend by hand. Placing a block of wood close to the fold improves the result.

REQUIRED FIXINGS

- 2 x Tek Screws (12G x 16mm) or
- 2 x pop rivets (3mm shaft)

HARD SURFACE FIXING

If you need to secure the edge to hard surfaces, the hard surface fixing bracket can be used. It's compatible with fixing pins or can be bolted down. (Options sold separately)

TIP

- Position whole run first to be sure it's spot on before fixing in place.
- Insert ALL fix pegs adjacent edge (3A), then work from one end to the other to fix (3B).
- When working around an existing lawn, use marker paint to set out your line and make a clean cut with your shovel or edge cutter. This way you can install the edge snug against the lawn.

STEP 1 - JOIN

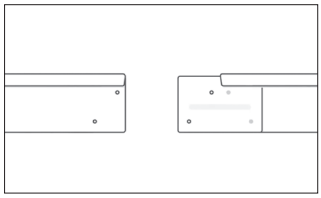

STEP 2 - SCREW

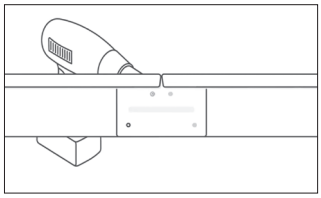

STEP 3A - PEG

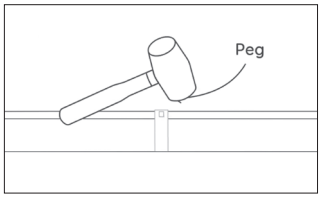

STEP 3B - FIX

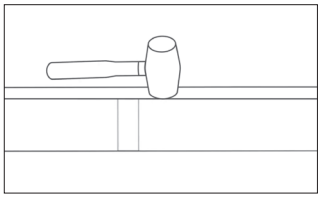

PRE-MADE CORNER

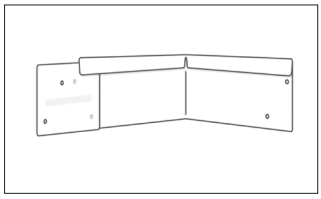

MAKE CORNER - NOTCH/SCORE WITH GRINDER

TIGHT RADIUS

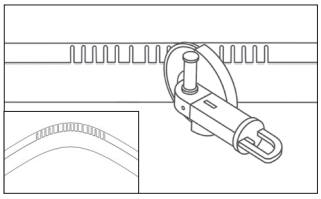

WEATHERING STEEL 10 YEAR STRUCTURAL INTEGRITY GUARANTEE
GALVANISED STEEL 15 YEAR STRUCTURAL INTEGRITY GUARANTEE
AUSTRALIAN OWNED · AUSTRALIAN DESIGNED